



Thank you for choosing AirDry. You are now on your way to saving space, energy and money! Installing AirDry is simple and takes only about 45 minutes. First, please check your package and make sure that it contains all the items listed in the Parts List. Then, follow the three installation steps below. Installation photos are available on our website www.airdry.org (click on Our Product then Product Installation)

Parts List


Rods	6
Consoles	2
Wall Clasp(1) and Cords(6)	1 set
Beads (packaged in console)	12
Anchors & Screws (packaged in console)	8 sets

Bobby Pin & Fishing Line are supplied for installation

Product Specifications

Maximum Load:	5lbs (2.3kg) per rod
Dimensions:	43”w x 22”d x 2”h (110x55x5cm)
Rod Length:	42” (107cm)
Total Drying Area:	21 feet (6.4 m)
Weight:	3 lbs (1.3) kg
Color:	White

Step 1 – Consoles and Wall Clasp

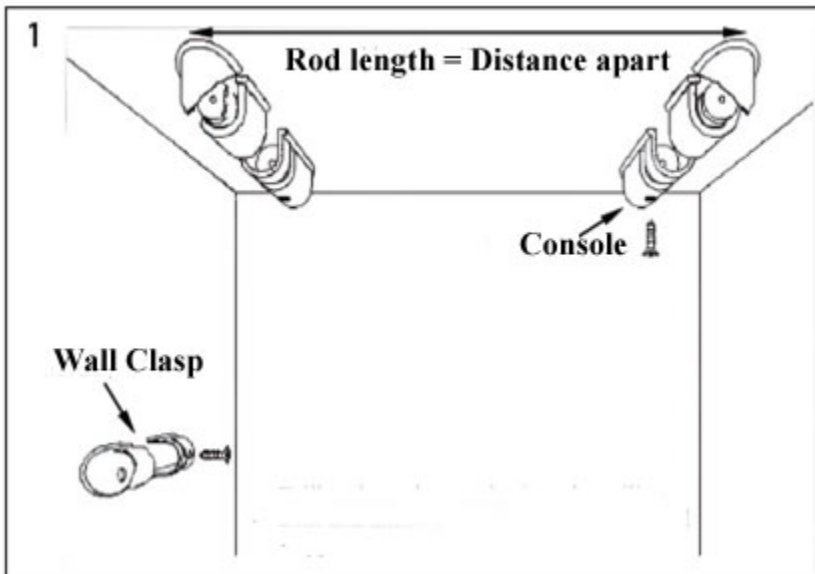


Choose a wall (left or right) to install the wall clasp (*drawing shows left*)

Console on the wall clasp side should be approximately 2”-3” (5-8cm) from the wall

Attach consoles to the ceiling.
(Distance between centers of consoles: 42” (107cm))

Attach wall clasp to the wall.
(Approximately 5 ft (150 cm) from the floor).

Step 2 – Cords and Rods

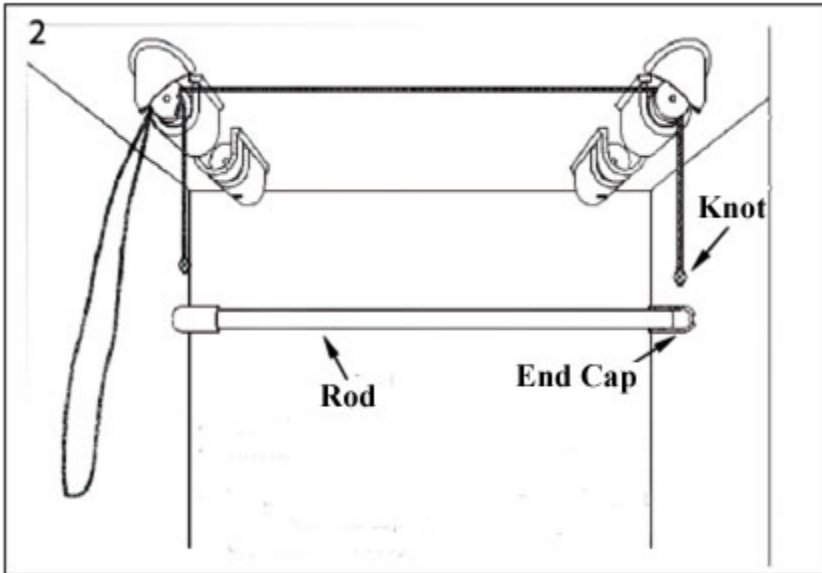


Attention: Do not cut the cord.

Pull cord through consoles according to drawing. *(Use supplied bobby pin)*

Tie a single knot at each end of the cord and insert cord ends into caps *(without taking off end caps from the rod)*

If needed, use a small screwdriver to push the knot into the cap.

Step 3 – Cords and Beads

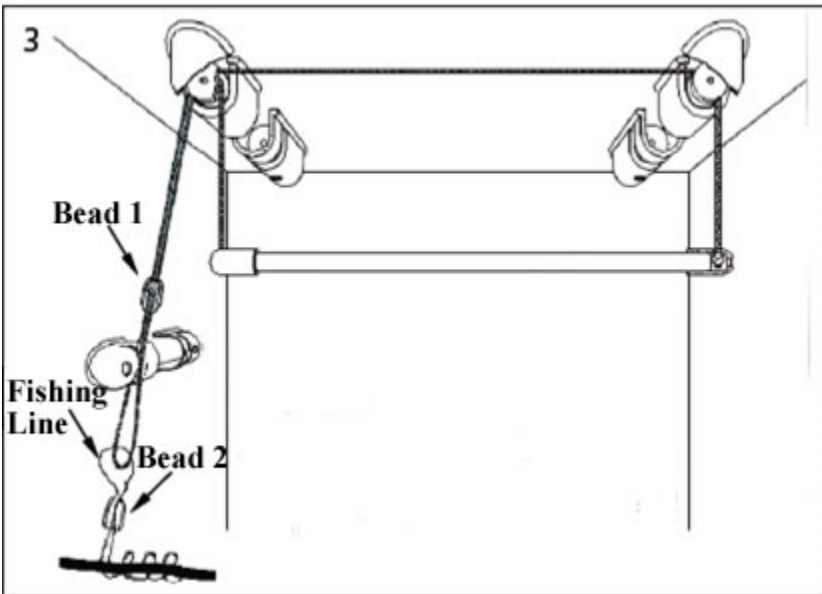

Pull looped cord through 2 beads. *(Use supplied fishing line)*

Tie a knot for bead 1 – so that the rod is in the ceiling position

Tie a knot for bead 2 – so that the rod is in a comfortable position for hanging wet clothes

For more information or to *Contact Us*, please visit www.airdry.org

Enjoy the product, and don't forget to show it to your friends and neighbors.